


# TIMING MATE

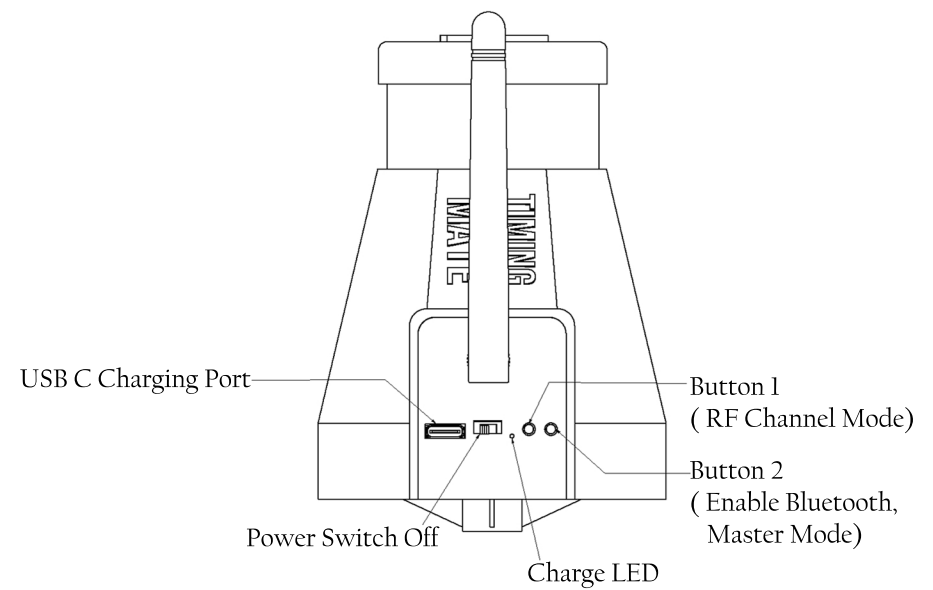

## NORMAL OPERATION

When the device is turned on, it automatically enters SEEK mode.

In this mode, the device blinks and waits to receive a pairing request from a MASTER device.

To switch to MASTER mode, press BUTTON 2. This action also activates Bluetooth, allowing a phone to connect.

## MASTER MODE

Master mode designates the gate as the master device, which is the central unit to which all other gates connect.

There can only be one master device in each group of gates.

To enable MASTER mode, press BUTTON 2. The device will blink green and start searching for other gates.

## CONTACT US

You can reach us via our social media accounts, email ([admin@timingmate.com](mailto:admin@timingmate.com)) or website ([timingmate.com](http://timingmate.com))

## HOW TO PAIR MULTIPLE GATES

Press BUTTON 2 on the MASTER device to initiate pairing.

The MASTER device will blink green and search for other gates for 20 seconds.

When a device is successfully paired, its indicator light changes from blinking blue to solid green for 1 second.

## CHANGE RF CHANNEL

The default RF channel is set to one.

To enter RF CHANNEL mode, hold BUTTON 1 for 3 seconds and release. The device will blink red to indicate the current channel.

Press BUTTON 1 to increase the channel number. To save the new channel, hold BUTTON 1 for 3 seconds and release. Now restart the device.

All gates need to be on the same channel to pair and communicate.

# GETTING STARTED GUIDE

## LEAVE A REVIEW & TAG US

We love to see Timing Mate in use. Help us make high-performance sports tech affordable, please tag us in your posts!

Digital Version

